

N6 CIF Series Standalone DVR

Quick Start Guide

Table of Contents

1	Hardware Installation and Connection.....	1
1.1	Check Unpacked DVR.....	1
1.2	About Front Panel and Rear Panel.....	1
1.3	After Remove the Chassis.....	1
1.4	HDD Installation	1
1.5	Front Panel	2
1.5.1	1.5U series	2
1.5.2	2U series.....	4
1.5.3	3U series.....	4
1.6	Rear Panel.....	6
1.6.1	1.5U series	6
1.6.2	2U series.....	7
1.6.3	3U series.....	8
1.7	Connection Sample	9
1.8	Alarm Input and Output Connection	9
1.8.1	Alarm Input and Output Details.....	9
1.8.2	Alarm Input Port.....	11
1.8.3	Alarm Output Port.....	11
2	Overview of Navigation and Controls.....	12
2.1	Login, Logout & Main Menu	12
2.1.1	Login.....	12
2.1.2	Main Menu.....	13
2.1.3	Logout	13
2.1.4	Auto Resume after Power Failure	14
2.2	Live Viewing.....	14
2.3	Manual Record.....	15
2.3.1	Manual record menu	15
2.3.2	Basic operation	15
2.3.3	Enable/disable record	16
2.3.4	Enable all channel recording	16
2.3.5	Stop all channel recording	17

2.4	Search & Playback	17
2.5	Schedule	21
2.5.1	Quick Setup.....	22
2.5.2	Redundancy	22
2.6	Snapshot	23
2.6.1	Schedule Snapshot.....	23
2.6.2	Activation Snapshot	24
2.6.3	Priority	25
2.6.4	Image FTP.....	25
2.7	Network	25
2.7.1	Network Setting	27
2.8	Pan/Tilt/Zoom	28
2.8.1	PTZ Setup	28
2.8.2	PTZ Operation	29
2.8.3	3D Intelligent Positioning Key	30
3	Web Client Operation	31
3.1	Network Connection	31
3.2	Login	31
3.3	Main Window	32
3.3.1	LAN Login.....	32
3.3.2	WAN Login	32
	Appendix Toxic or Hazardous Materials or Elements	33

Welcome

Thank you for purchasing our DVR!

This quick start guide will help you become familiar with our DVR in a very short time.

Before installation and operation, please read the following safeguard and warning carefully!

Important Safeguard and Warning

1 . Electrical safety

All installation and operation here should conform to your local electrical safety codes.

We assume no liability or responsibility for all the fires or electrical shock caused by improper handling or installation.

2 . Transportation security

Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.

3 . Installation

Keep upwards. Handle with care.

Do not apply power to the DVR before completing installation.

Do not place objects on the DVR.

4 . Qualified engineers needed

All the examination and repair work should be done by the qualified service engineers.

We are not liable for any problems caused by unauthorized modifications or attempted repair.

5 . Environment

The DVR should be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances and etc.

6. Accessories

Be sure to use all the accessories recommended by manufacturer.

Before installation, please open the package and check all the components are included:

Contact your local retailer ASAP if something is missing in your package.

7. Lithium battery

Improper battery use may result in fire, explosion, or personal injury!

When replace the battery, please make sure you are using the same model!

1 Hardware Installation and Connection

Note: All the installation and operations here should conform to your local electric safety rules.

1.1 Check Unpacked DVR

When you receive the DVR from the forwarding agent, please check whether there is any visible damage. The protective materials used for the package of the DVR can protect most accidental clashes during transportation. Then you can open the box to check the accessories.

Please check the items in accordance with the list. (Remote control is optional). Finally you can remove the protective film of the DVR.

Note

Remote control is not a standard accessory and it is not included in the accessory bag.

1.2 About Front Panel and Rear Panel

For detailed information of the function keys in the front panel and the ports in the rear panel, please refer to the *User's Manual* included in the resource CD.

The model label in the front panel is very important; please check according to your purchase order.

The label in the rear panel is very important too. Usually we need you to represent the serial number when we provide the service after sales.

1.3 After Remove the Chassis

Please check the data cable, power cable, COM cable and main board cable connection is secure or not.

1.4 HDD Installation

You can refer to the Appendix for recommended HDD brand. The 1.5U series product supports 2 HDDs and the 2U series product supports 8 HDDs. It has no requirement for HDD capacity.

Please use HDD of 7200rpm or higher. Usually we do not recommend the PC HDD.

Please follow the instructions below to install hard disk.



1. Loosen the screws of the upper cover.



2. Remove the HDD upper bracket



3. Now you can see the bottom bracket



4. Line up the HDD to the four holes of the HDD bracket.



5. Use screws to fix HDD.



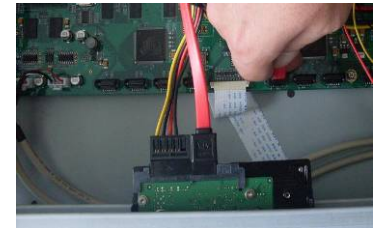
6. Install the upper bracket and then Use screws to fix HDD in the bracket.



7. Unfasten the HDD power cable.



8. Insert the HDD power cable.



9. Use the special data cable to connect the HDD and the SATA port. Close the chassis and fix the screws to secure firmly.

Note:

- You can connect the HDD data cable and the power cable first and then fix the HDD in the device.
- Please pay attention to the front cover. It adopts the vertical sliding design. You need to push the clip first and then put down.

1.5 Front Panel

1.5.1 1.5U series

The front panel is shown as in Figure 1-1.

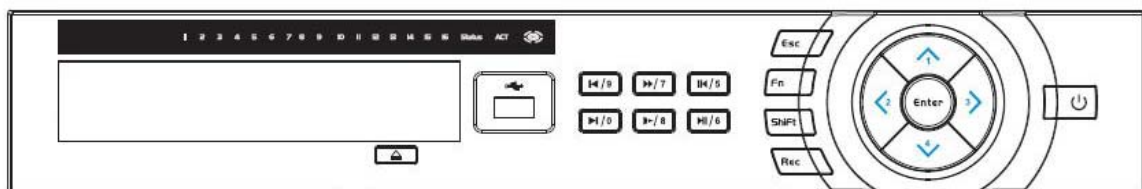







 






Figure 1-1

Please refer to the following sheet for front panel button information.

Name	Icon	Function
------	------	----------

Power button		Power button, press this button for three seconds to boot up or shut down DVR.
Shift	Shift	In textbox, click this button to switch between numeral, English(Small/Capitalized),donation and etc.
Up/1 Down/4	 	Activate current control, modify setup, and then move up and down.
		Increase/decrease numeral.
		Assistant function such as PTZ menu.
		In text mode, input number 1/4 (English character G/H/I)
Left/2 Right/3	 	Shift current activated control,
		When playback, click these buttons to control playback bar. In text mode, input number 2(English character A/B/C) /3(English character D/E/F)
ESC	ESC	Go to previous menu, or cancel current operation.
		When playback, click it to restore real-time monitor mode.
Enter	ENTER	Confirm current operation
		Go to default button
		Go to menu
Record	REC	Manually stop/start recording, working with direction keys or numeral keys to select the recording channel.
Slow play/8		Multiple slow play speeds or normal playback. In text mode, input number 8 (English character T/U/V).
Assistant	Fn	One-window monitor mode, click this button to display assistant function: PTZ control and image color.
		Backspace function: in numeral control or text control, press it for 1.5seconds to delete the previous character before the cursor.
		In motion detection setup, working with Fn and direction keys to realize setup.
		In text mode, click it to switch between numeral, English character(small/capitalized) and etc.
		Realize other special functions.
Fast play/7		Various fast speeds and normal playback. In text mode, input number 7 (English character P/Q/R/S).
Play previous/0		In playback mode, playback the previous video In text mode, input number 0.
Reverse/Pause/6		In normal playback or pause mode, click this button to reverse playback In reverse playback, click this button to pause playback. In text mode, input number 6 (English character M/N/O)

Play Next/9		In playback mode, playback the next video In menu setup, go to down ward of the dropdown list. In text mode, input number 9 (English character W/X/Y/Z)
Play/Pause /5		In normal playback click this button to pause playback In pause mode, click this button to resume playback. In text mode, input number 5(English character J/K/L).
USB port		To connect USB storage device, USB mouse.
Network abnormal indication light	Net	Network error occurs or there is no network connection, the light becomes red to alert you.
HDD abnormal indication light	HDD	HDD error occurs or HDD capacity is below specified threshold value, the light becomes red to alert you.
Record light	1-16	It becomes on when system is recording.
IR Receiver	IR	It is to receive the signal from the remote control.
Alarm indication light	Alarm	Here you can view there is external alarm input or not. The light becomes on when there is an external alarm. The light become off when the external alarm stops.

1.5.2 2U series

The front panel of 24/32 series is shown as in Figure 1-2.

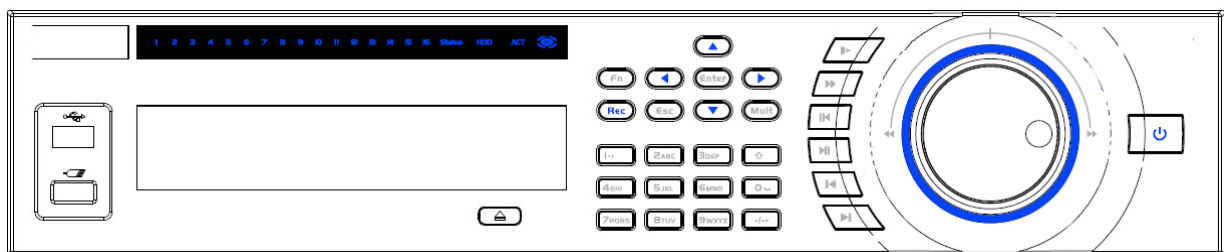


Figure 1-2






1.5.3 3U series


The front panel of the 64-channel is shown as below. See Figure 1-3.



Figure 1-3

Please refer to the following sheet for front panel button information.

Name	Icon	Function
Power button		Power button, press this button for three seconds to boot up or shut down DVR.
Number button	0-9	Input Arabic number Switch channel
Input number more than 10	-/--	If you want to input a number more than 10, please click this button and then input.
Shift		In textbox, click this button to switch between numeral, English(Small/Capitalized),donation and etc. Enable or disable tour.
Up/ Down		Activate current control, modify setup, and then move up and down. Increase/decrease numeral. Assistant function such as PTZ menu.
Left/ Right		Shift current activated control, and then move left and right. When playback, click these buttons to control playback bar.
ESC	ESC	Go to previous menu, or cancel current operation. When playback, click it to restore real-time monitor mode.
Enter	ENTER	Confirm current operation Go to default button Go to menu
Record	REC	Manually stop/start recording, working with direction keys or numeral keys to select the recording channel.
Slow play		Multiple slow play speeds or normal playback.
Assistant	Fn	One-window monitor mode, click this button to display assistant function: PTZ control and image color. Backspace function: in numeral control or text control, press it for 1.5seconds to delete the previous character before the cursor. In motion detection setup, working with Fn and direction keys to realize setup. In text mode, click it to switch between numeral, English character(small/capitalized) and etc. In HDD management interface, you can click it to switch HDD record information and other information (Menu prompt) Realize other special functions.

Fast play	▶▶	Various fast speeds and normal playback.
Play previous	◀	In playback mode, playback the previous video
Reverse/Pause	◀	In normal playback or pause mode, click this button to reverse playback In reverse playback, click this button to pause playback.
Play Next	▶	In playback mode, playback the next video In menu setup, go to down ward of the dropdown list.
Play/Pause	▶	In normal playback click this button to pause playback In pause mode, click this button to resume playback.
Window switch	Mult	Click it to switch one-window/multiple-window.
Shuttle(outer ring)		In real-time monitor mode it works as left/right direction key. Playback mode, counter clockwise to forward and clock wise to backward.
Jog(inner dial)		Up/down direction key. Playback mode, turn the inner dial to realized frame by frame playback. (Only applies to some special versions.)
USB port		To connect USB storage device, USB mouse.
Remote control indication light	ACT	Remote control indication light
Status indication light	Status	If there is Fn indication light, current status indication light is null.
Power indication light	PWR	Power indication light.
Record light	1-32	It becomes on when system is recording. For 32-channel series When the light flashes slowly, it means the corresponding channel of 1-16 channel is recording now. When the light flashes fast, it means the corresponding channel of 17-32 channel is recording now. When the light becomes on, It means the corresponding 2-channel is recoding now.
IR Receiver	IR	It is to receive the signal from the remote control.

1.6 Rear Panel

1.6.1 1.5U series

The rear panel of 24/32-ch series product is shown as in Figure 1-4.

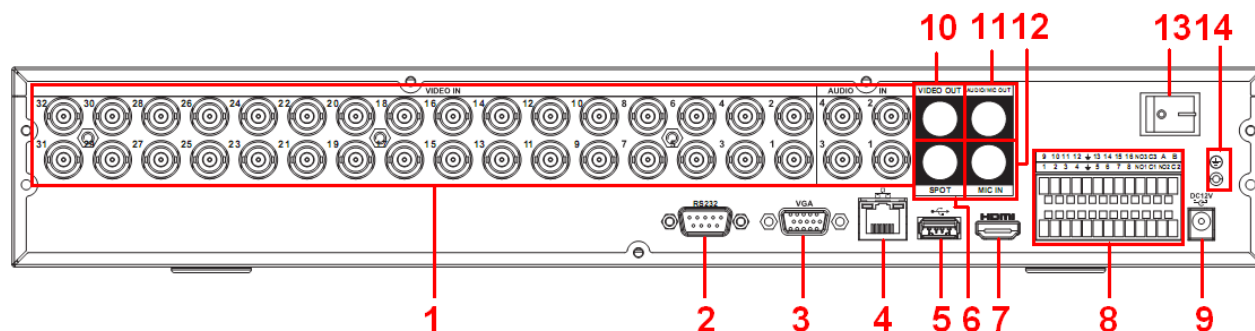


Figure 1-4

Please refer to the following sheet for detailed information.

1	Video input
2	RS232 port
3	Video VGA output
4	Network port
5	USB port
6	SPOT output
7	HDMI output
8	Alarm input/Alarm output/RS485 port
9	Power socket
10	Video output
11	Audio/Bidirectional talk output port
12	Bidirectional talk input port
13	Power on/off button
14	GND port

1.6.2 2U series

This series DVR rear panel is shown as below. See Figure 1-5.

Please note the following figure is based on the 24/32-channel series product.

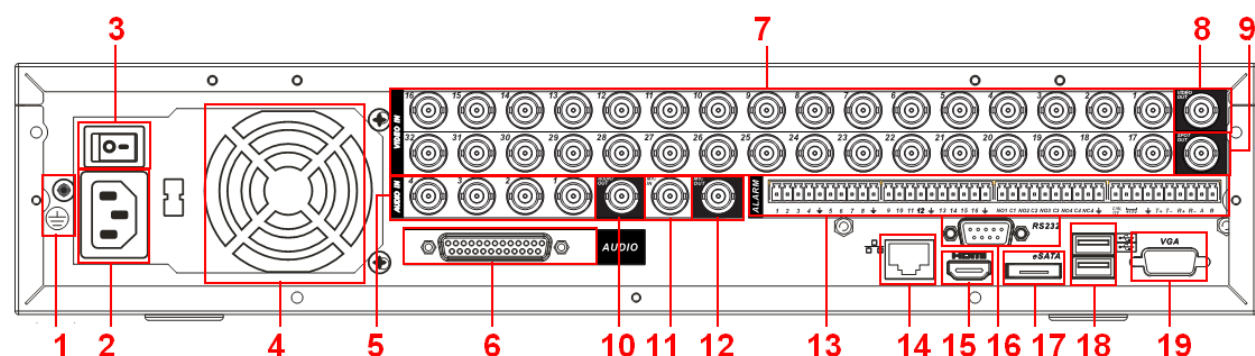


Figure 1-5

Please refer to the following sheet for detailed information.

1	GND port
2	Power input port
3	Power button
4	Fan

5	1 st to 4 th -channel audio input
6	DB25 port (5 th to 16 th -channel audio input port)
7	Video input
8	Video CVBS output
9	Matrix video output
10	Audio output
11	Bidirectional talk input port
12	Bidirectional talk output port
13	Alarm input/Alarm output/RS485 port
14	Network port
15	HDMI port
16	RS232 port
17	eSATA port
18	USB port
19	Video VGA output

1.6.3 3U series

The 64-channel series DVR rear panel is shown as below. See Figure 1-6.

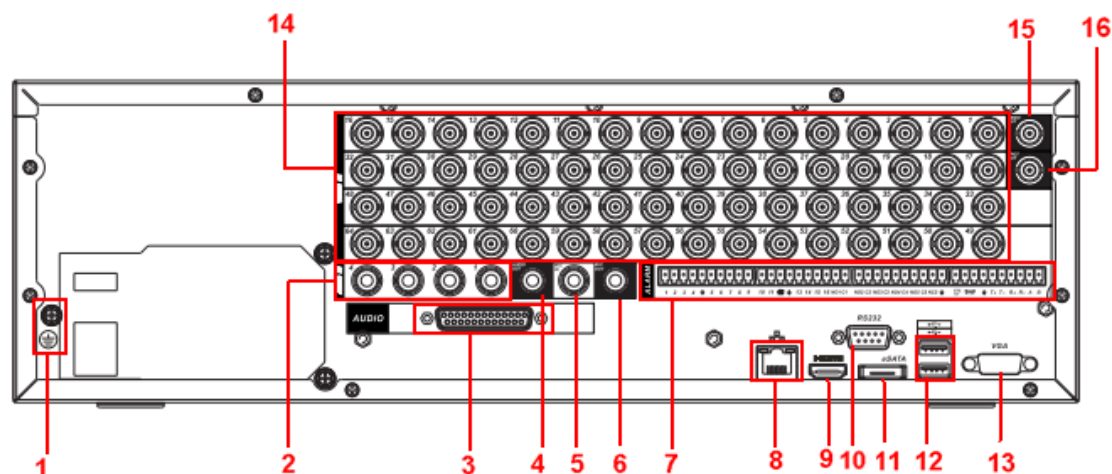


Figure 1-6

Please refer to the following sheet for detailed information.

1	GND port
2	1 st to 4 th -channel audio input
3	DB25 port (5 th to 16 th -channel audio input port)
4	Audio output
5	Bidirectional talk input port
6	Bidirectional talk output port
7	Alarm input/Alarm output/RS485 port
8	Network port
9	HDMI port
10	RS232 port
11	eSATA port
12	USB port
13	Video VGA output
14	Video input
15	Video output
16	Matrix video output

When connect the Ethernet port, please use crossover cable to connect the PC and use the straight cable to connect to the switcher or router.

1.7 Connection Sample

Please refer to Figure 1-7 for connection sample.

Please note the following figure is based on the 32-channel 2U series product.

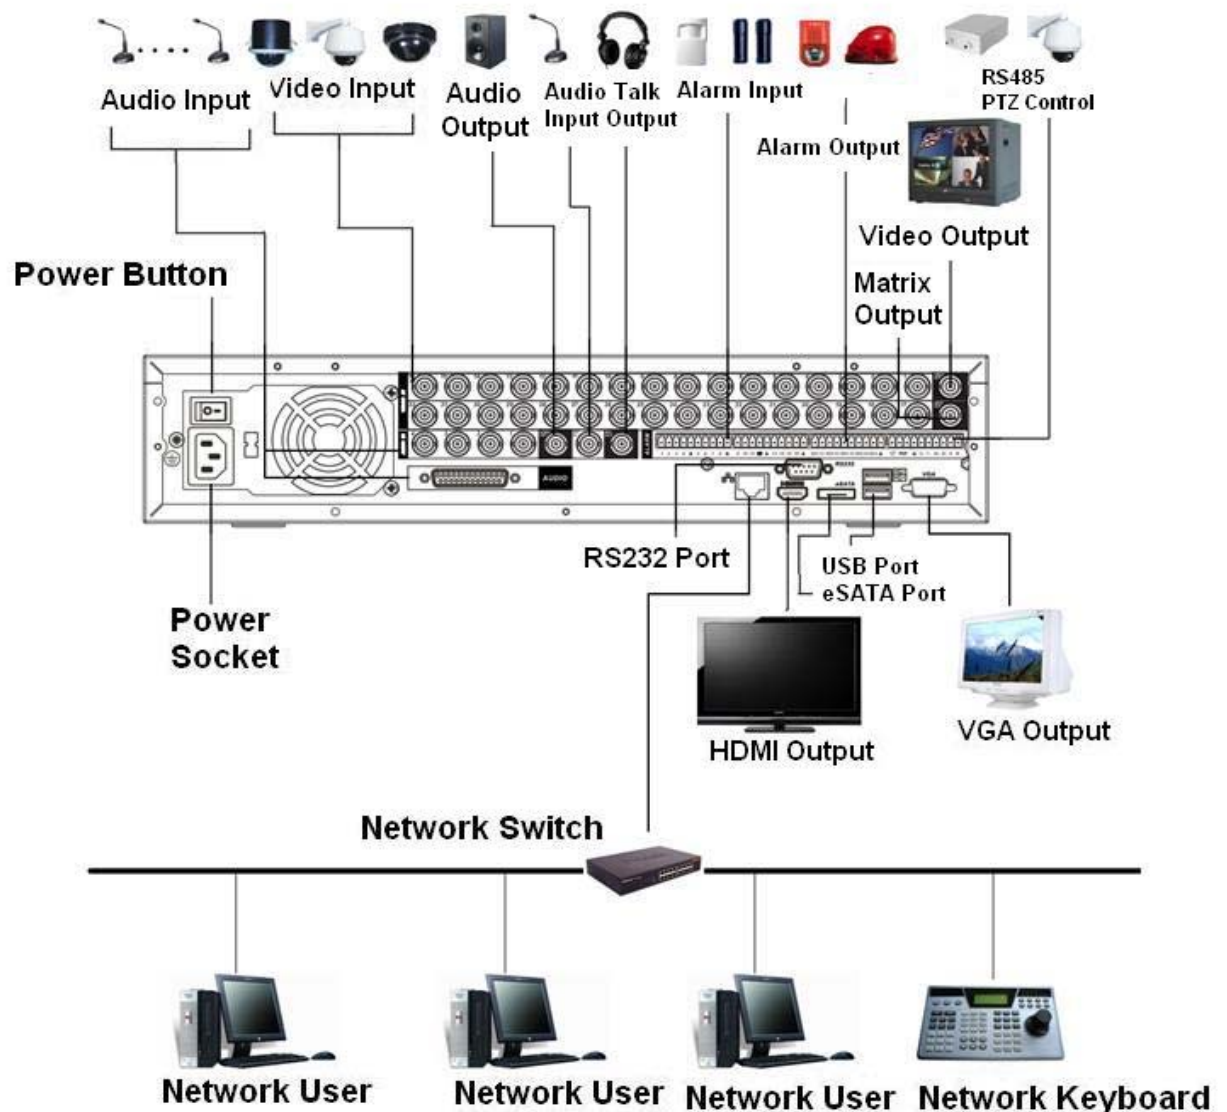


Figure 1-7

1.8 Alarm Input and Output Connection

Important

Please refer to the specifications for the alarm input and output channel amount. Do not merely count the alarm input and out channel amount according to the ports on the rear panel.

There are two alarm input types for you to select: normal open (NO) and normal close (NC).

1.8.1 Alarm Input and Output Details

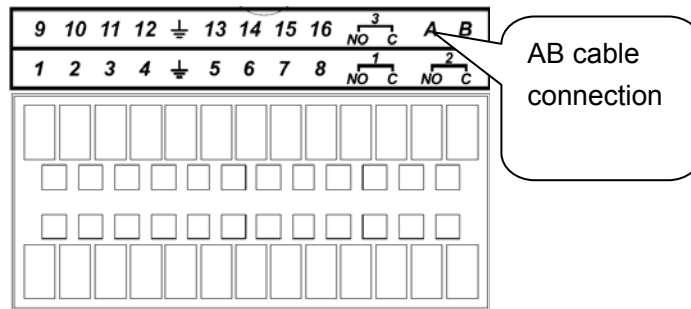


Figure 1-8

You can refer to the following sheet and Figure 1-8 for alarm input and output information.

1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16	ALARM 1 to ALARM 16. The alarm becomes active in low voltage.
NO1 C1, NO2 C2, NO3 C3,	There are three groups of normal open activation output (on/off button)
	Earth cable.
485 A/B	485 communication port. They are used to control devices such as PTZ. Please parallel connect 120TΩ between A/B cables if there are too many PTZ decoders.

1.8.1.1 2U Series

The 2U series product interface is shown as in Figure 1-9.

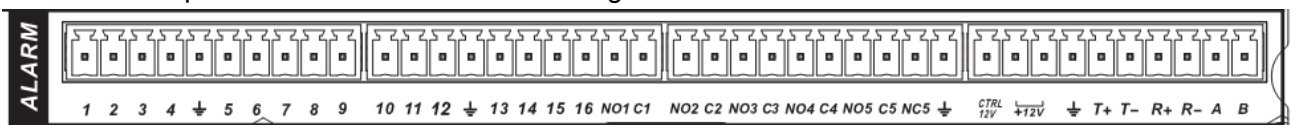


Figure 1-9

You can refer to the following sheet and Figure 1-9 for alarm input and output information.

1, 2, 3, 4,, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16	ALARM 1 to ALARM 16. The alarm becomes active in low voltage.
NO1 C1, NO2 C2, NO3 C3, NO4 C4, NO5 C5 NC5	The first four are four groups of normal open activation output (on/off button) NO5 C5 NC5 is a group of NO/NC activation output (on/off button)
CTRL 12V	Control power output. You need to close the device power to cancel the alarm.
+12V	It is external power input. Need the peripheral equipment to provide +12V power (below 1A).
	Earth cable.
T+, T-, R+, R-	Four-wire full-duplex RS485 port. T+, T- is the output cable and R+, R- is the input cable.

485 A/B	485 communication port. They are used to control devices such as PTZ. Please parallel connect 120TΩ between A/B cables if there are too many PTZ decoders.
---------	--

1.8.2 Alarm Input Port

Please refer to the following sheet for more information.

- Normal open or Normal close type.
- Please parallel connect COM end and GND end of the alarm detector (Provide external power to the alarm detector).
- Please parallel connect the Ground of the DVR and the ground of the alarm detector.
- Please connect the NC port of the alarm sensor to the DVR alarm input(ALARM)
- Use the same ground with that of DVR if you use external power to the alarm device.

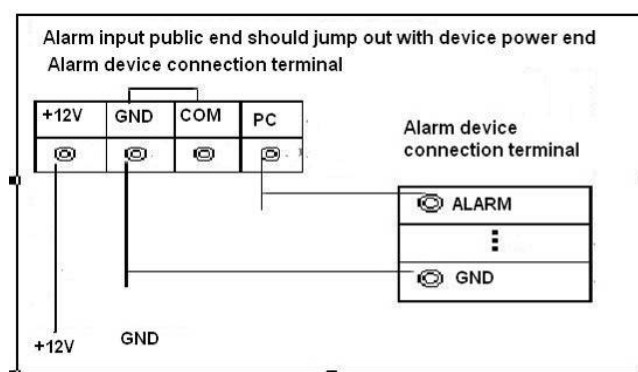


Figure 1-10

1.8.3 Alarm Output Port

- Provide external power to external alarm device.
- To avoid overloading, please read relay parameters sheet in the *User's Manual* carefully.
- RS485 A/B cable is for the A/B cable of the PTZ decoder.

2 Overview of Navigation and Controls

Before operation, please make sure:

- You have properly installed HDD and all the cable connections.
- The provided input power and the device power are matched.
- The external power shall be AC90~264V 50+2% Hz.
- Always use the stable current, if necessary UPS is a best alternative measure.

2.1 Login, Logout & Main Menu

2.1.1 Login

After system booted up, system pops up the startup wizard.

Click the Cancel button; you can go to the system login interface.

Click the Next Step button; you can go to the startup wizard interface. Here you can set the system basic information. See Figure 2-1.




Figure 2-1

The system login interface is shown as in Figure 2-2.

System consists of four accounts:

- **Username:** admin. **Password:** admin. (administrator, local and network)
- **Username:** 888888. **Password:** 888888. (administrator, local only)
- **Username:** 666666. **Passwords:** 666666 (Lower authority user who can only monitor, playback, backup and etc.)
- **Username:** default. **Password:** default (hidden user)

You can use USB mouse, front panel, remote control (not included in the accessory bag) or

keyboard to input. About input method: Click  to switch between numeral, English character (small/capitalized) and denotation.

Note:

For security reason, please modify password after you first login.

Within 30 minutes, three times login failure will result in system alarm and six times login failure will result in account lock!



Figure 2-2

2.1.2 Main Menu

After you logged in, the system main menu is shown as below. See Figure 2-3.

There are total six icons: search, information, setting, backup, advanced and shutdown.

You can move the cursor to highlight the icon, and then double click mouse to enter the sub-menu.

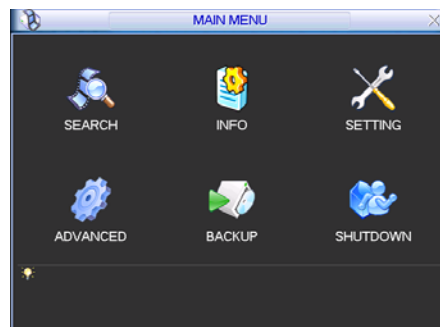


Figure 2-3

2.1.3 Logout

There are two ways for you to log out.

The first one is from menu option:

In the main menu, click shutdown button, you can see an interface is shown as below. See Figure 2-4.

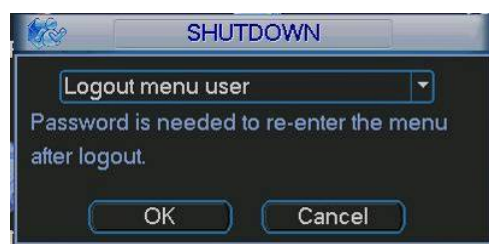


Figure 2-4

There are several options for you. See Figure 2-5.

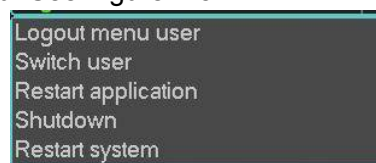


Figure 2-5

The other ways is to press power button on the front panel for at least 3 seconds, system will stop all operations. Then you can click the power button in the front panel to turn off the DVR.





Please note, before you replace the HDD, do remember shutting down the device and unplug the power cable.

2.1.4 Auto Resume after Power Failure

The system can automatically backup video and resume previous working status after power failure.

2.2 Live Viewing

After you logged in, the system is in live viewing mode by default. You can see system date, time and channel name. If you want to change system date and time, you can refer to general settings (Main Menu->Setting->General). If you want to modify the channel name, please refer to the display settings (Main Menu->Setting->Display)

1		Recording status	3		Video loss
2		Motion detection	4		Camera lock

Preview Control

The preview control function has the following features.

- Support preview playback.
 - ✧ In the preview desktop, system can playback previous 5-60 minutes record of current channel. Please go to the Main Menu->General to set real-time playback time.
 - ✧ Support drag and play function. You can use your mouse to select any playback start time.
 - ✧ Support playback, pause and exit function.
 - ✧ Right now, system does not support slow playback and backward playback function.
- Support digital zoom function.
- Support real-time backup function.

You can follow the contents listed below for the operation instruction.

Preview control interface






Move you mouse to the top centre of the video of current channel, you can see system pops up the preview control interface. See Figure 2-6. If your mouse stays in this area for more than 6 seconds and has no operation, the control bar automatically hides.



Figure 2-6

You can refer to the following sheet for detailed information.

SN	Name	Function
1	Realtime playback	It is to playback the previous 5-60 minutes record of current channel. Please go to the Main Menu->General to set real-time playback time. System may pop up a dialogue box if there is no such record in current channel.
2	Digital zoom	It is to zoom in specified zone of current channel. It supports zoom in function of multiple-channel.

		The selected area has an icon as  and the free area is shown as an icon as  .
3	Real-time backup function	It is to backup the video of current channel to the USB device. System can not backup the video of multiple-channel at the same time. Current selected backup channel has an icon as  and the free channel is shown as an icon as  . . Once the backup started, you can see the free channel is shown as an icon as  .
4	Exit	

Playback control

The playback control has the following features.

- Support play, pause, and exit and drag function.
- During the preview playback process, you can not see the channel title and record status of current channel. It will display the channel title and the record status once you exit the preview playback.
- During the preview playback, you can not switch the displayed channel or change current window-display mode.
- Please note, the tour function has the higher priority than the preview playback. System automatically exits the preview playback function and its corresponding interface when the tour function started. You can not control the preview playback until the tour function ended.

2.3 Manual Record

Note:

You need to have proper rights to implement the following operations. Please make sure the HDD has been properly installed.

2.3.1 Manual record menu

There are two ways for you to go to manual record menu.

- Right click mouse or in the main menu, Advanced->Manual Record.
- In live viewing mode, click record button in the front panel or record button in the remote control.

Manual record menu is shown as in Figure 2-7.

2.3.2 Basic operation

There are three statuses: schedule/manual/stop. Please highlight icon “○” to select corresponding channel.

- Manual: The highest priority. After manual setup, all selected channels will begin ordinary recording.
- Schedule: Channel records as you have set in recording setup (Main Menu->Setting->Schedule)
- Stop: All channels stop recording.

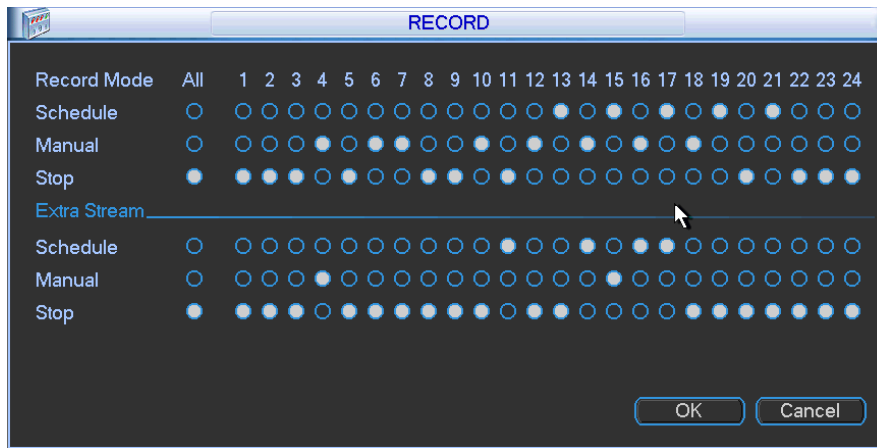


Figure 2-7

2.3.3 Enable/disable record

Please check current channel status: “○” means it is not in recording status, “●” means it is in recording status.

You can use mouse or direction key to highlight channel number. See Figure 2-8.

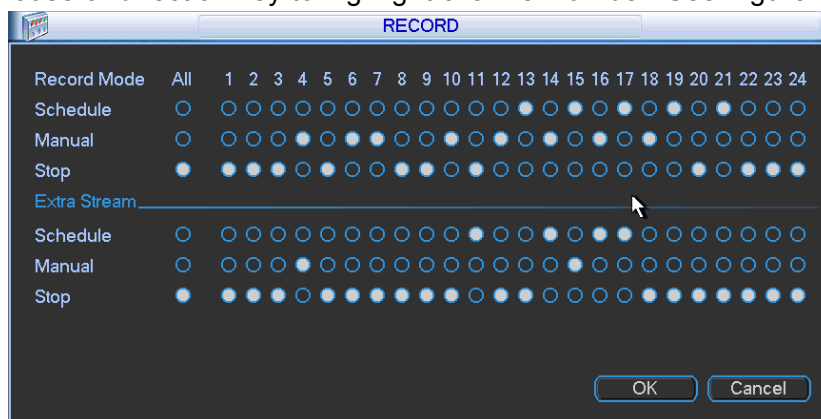


Figure 2-8

2.3.4 Enable all channel recording

Highlight ○ below All, you can enable all channel recording.

- All channel schedule record

Please highlight “ALL” after “Schedule”. See Figure 2-9.

When system is in schedule recording, all channels will record as you have previously set (Main menu->Setting->Schedule).

The corresponding indication light in front panel will turn on.

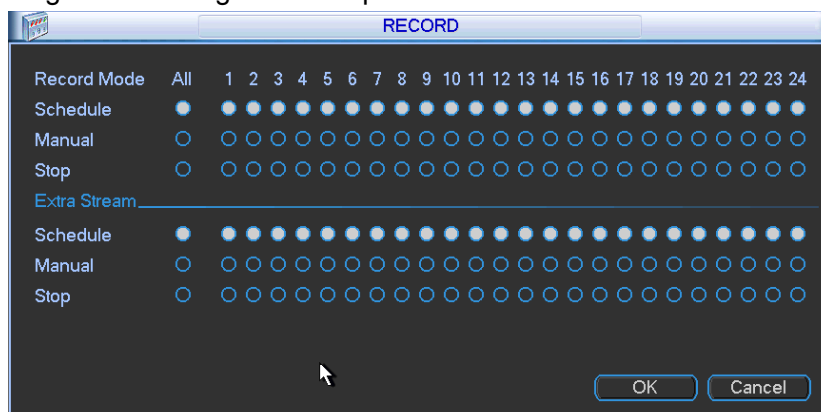


Figure 2-9

- All channel manual record

Please highlight “ALL” after “Manual.” See Figure 2-10.

When system is in manual recording, all scheduled set up you have set in will be null ((Main menu->Setting->Schedule)).

You can see indication light in front panel turns on, system begins manual record now.

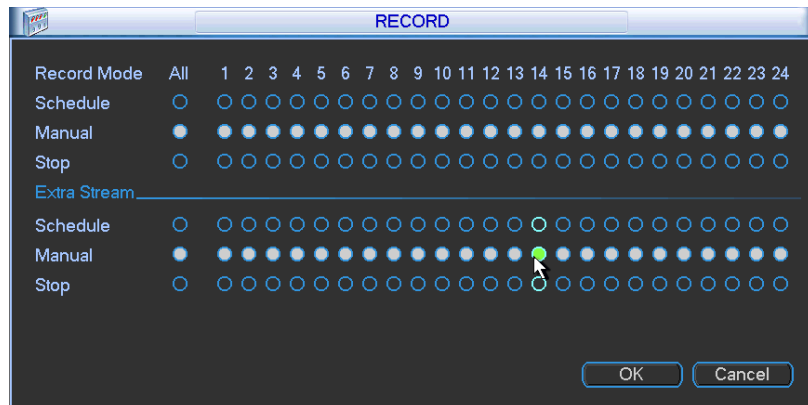


Figure 2-10

2.3.5 Stop all channel recording

Please highlight “ALL” after “Stop”. See Figure 2-11.

System stops all channel recording no matter what mode you have set in the menu (Main menu->Setting->Schedule)

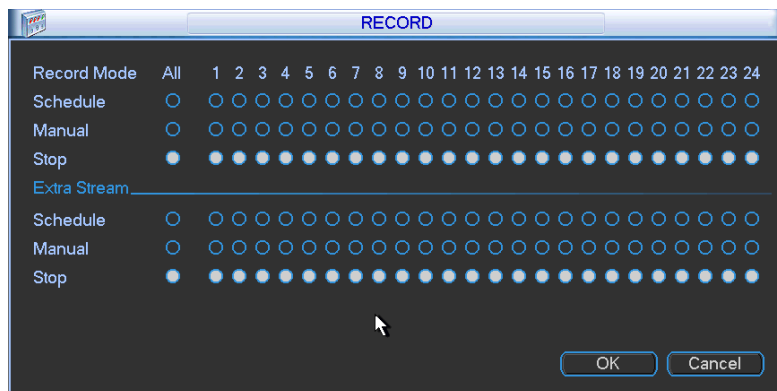


Figure 2-11

2.4 Search & Playback

Click search button in the main menu, search interface is shown as below. See Figure 2-12.

Usually there are three file types:

- R: Regular recording file.
- A: External alarm recording file.
- M: Motion detection recording file.

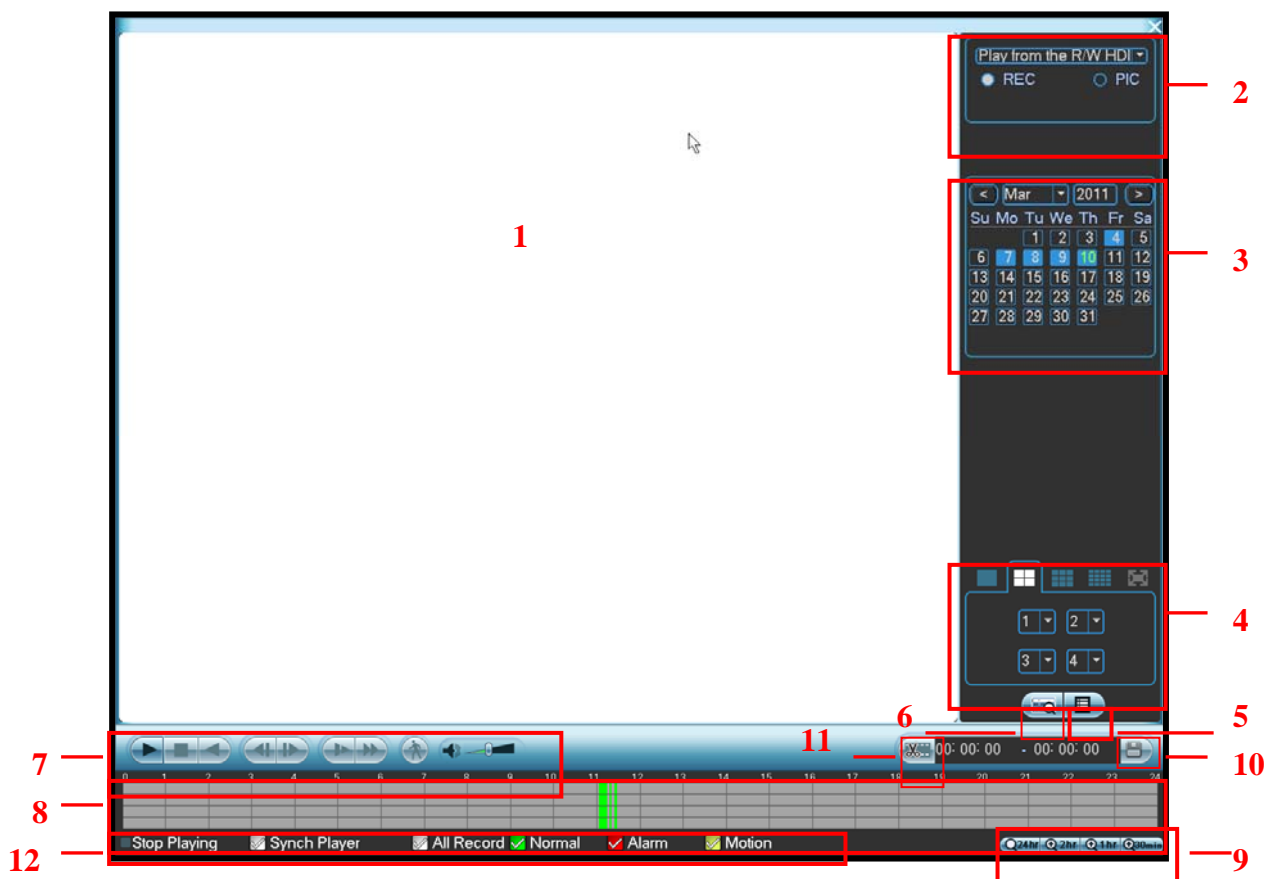




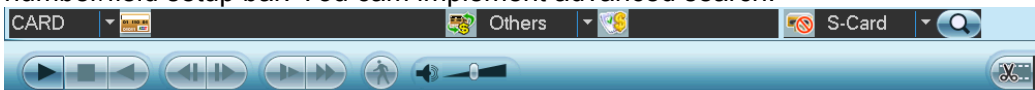

 


 



 






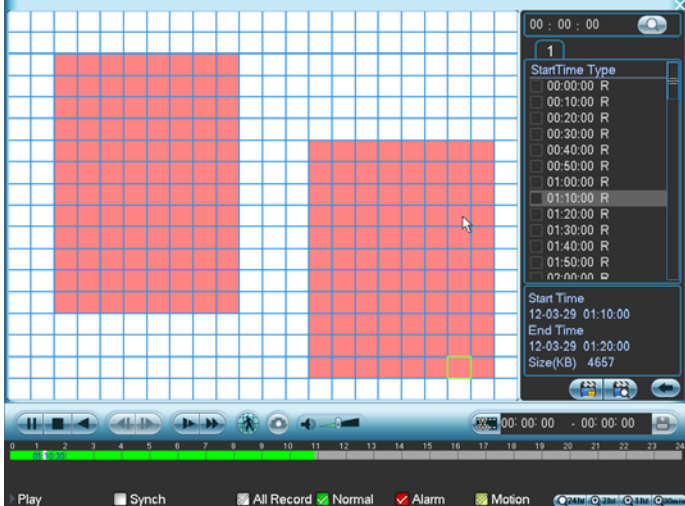



Figure 2-12

Please refer to the following sheet for more information.

SN	Name	Function
1	Display window	<ul style="list-style-type: none"> ●Here is to display the searched picture or file. ●Support 1/4/9/16-window playback.
2	Search type	<ul style="list-style-type: none"> ●Here you can select to search the picture or the recorded file. ●You can select to play from the read-write HDD or the connected external device.
3	Calendar	<ul style="list-style-type: none"> ●The blue highlighted date means there is picture or file. Otherwise, there is no picture or file. ●In any play mode, click the date you want to see, you can see the corresponding record file trace in the time bar.
4	Playback mode and channel selection pane.	<ul style="list-style-type: none"> ●Playback mode: 1/4/9/16. (It may vary due to different series.) ✧ In 1-window playback mode: you can select 1-16 channels. ✧ In 4-window playback mode: you can select 4 channels according to your requirement. ✧ In 9-window playback mode, you can switch between 1-9 and 10-16 channels. ✧ In 16-window playback mode, you can switch between 1-16 and 17-32 channels. ●The time bar will change once you modify the playback mode or the channel option.
5	File list switch button	<ul style="list-style-type: none"> ●Double click it, you can view the picture/record file list of current day. ●The file list is to display the first channel of the record file. ●The system can display max 128 files in one time. Use the ▲/▼ or the mouse to view the file. Select one item, and then double click the mouse or click the ENTER button to playback. ●You can input the period in the following interface to begin accurate search. ●File type: R—regular record; A—external alarm record; M—Motion detect record.

		 <ul style="list-style-type: none"> ●Lock file. Click the file you want to lock and click the button  to lock. The file you locked will not be overwritten. ●Search locked file: Click the button  to view the locked file. ●Return: Click button , system goes back to the calendar and channel setup interface. <p>Please note:</p> <ul style="list-style-type: none"> ●System max locks 16 files. The size of the locked file shall be less than the 1/4 of the HDD total space. The first 16G of each partition can not be locked. ●System can only lock one file at one time and can not lock the extra stream. For the file that is writing or overwriting, it can not be locked. 	
6	Card number search	<p>The card number search interface is shown as below. Here you can view card number/field setup bar. You can implement advanced search.</p> 	
7	Playback control pane.	 / 	<p>Play/Pause</p> <p>There are three ways for you to begin playback.</p> <ul style="list-style-type: none"> ● The play button ● Double click the valid period of the time bar. ● Double click the item in the file list. <p>In slow play mode, click it to switch between play/pause.</p>
			<p>Stop</p>
			<p>Backward play</p> <p>In normal play mode, left click the button, the file begins backward play. Click it again to pause current play.</p> <p>In backward play mode, click  to restore normal play.</p>
			<p>In playback mode, click it to play the next or the previous section. You can click continuously when you are watching the files from the same channel.</p> <p>In normal play mode, when you pause current play, you can click  and  to begin frame by frame playback.</p> <p>In frame by frame playback mode, click  to restore normal playback.</p>
			<p>Slow play</p> <p>In playback mode, click it to realize various slow play modes such as slow play 1, slow play 2, and etc.</p>
			<p>Fast forward</p> <p>In playback mode, click to realize various fast play modes such as fast play 1, fast play 2 and etc.</p>
		<p>Note: The actual play speed has relationship with the software version.</p>	
			<p>Smart search</p>
			<p>The volume of the playback</p>
			<p>Click the snapshot button in the full-screen mode, the system can snapshot 1 picture per second.</p>
8	Time bar	<ul style="list-style-type: none"> ●It is to display the record type and its period in current search criteria. ●In 4-window playback mode, there are corresponding four time bars. In other playback mode, there is only one time bar. ●Use the mouse to click one point of the color zone in the time bar, system begins playback. ●The time bar is beginning with 0 o'clock when you are setting the configuration. The time bar zooms in the period of the current playback time when you are playing the file. 	

		<ul style="list-style-type: none"> ●The green color stands for the regular record file. The red color stands for the external alarm record file. The yellow stands for the motion detect record file.
9	Time bar unit	<ul style="list-style-type: none"> ●The option includes: 24H, 12H, 1H and 30M. The smaller the unit, the larger the zoom rate. You can accurately set the time in the time bar to playback the record. ●The time bar is beginning with 0 o'clock when you are setting the configuration. The time bar zooms in the period of the current playback time when you are playing the file.
10	Backup	<p>Select the file(s) you want to backup from the file list. System max supports files from four channels. Then click the backup button, now you can see the backup menu. Click the start button to begin the backup operation. Check the file again you can cancel current selection. System max supports to display 32 files from one channel.</p>
11	Clip	<ul style="list-style-type: none"> ●It is to edit the file. ●Please play the file you want to edit and then click this button when you want to edit. You can see the corresponding slide bar in the time bar of the corresponding channel. You can adjust the slide bar or input the accurate time to set the file end time. Click this button again and then save current contents in a new file. .
12	Record type	In any play mode, the time bar will change once you modify the search type.
13	Smart search	<p>Click the  button, system begins smart search. System supports 396(22*18 PAL) and 330(22*15 NTSC) zones. See Figure 2-13.</p>  <p style="text-align: center;">Figure 2-13</p> <p>Click the , you can go to the smart search playback. Click it again, system stops smart search playback.</p> <p>Please note:</p> <ul style="list-style-type: none"> ● When system is playing, you can select a zone in the window to begin motion detect. Click the motion detect button to begin play. ● Once the motion detect play has begun, click button again will terminate current motion detect file play. ● The system will take the whole play zone as the motion detect region by default. ● If you select to play other file in the file list, system switches to motion detect play pf other file. ● During the motion detect play process, you can not implement operations such as change time bar, begin backward playback or frame by frame playback. . <p>Important System does not support motion detect zone setup during the full-screen mode.</p>
Other Functions		

14	Other channel synchronization switch to play when playback	When playing the file, click the number button, system can switch to the same period of the corresponding channel to play.
15	Digital zoom	When the system is in full-screen playback mode, left click the mouse in the screen. Drag your mouse in the screen to select a section and then left click mouse to realize digital zoom. You can right click mouse to exit.

2.5 Schedule

Note:


You need to have proper rights to implement the following operations. Please make sure the HDDs have been properly installed.

After the system booted up, it is in default 24-hour regular mode. You can set record type and time in schedule interface.

In the main menu, from Setting to Schedule, you can go to schedule menu. See Figure 2-14.

There are total six periods.

- Channel: Please select the channel number first. You can select “all” if you want to set for the whole channels.
- Week day: There are eight options: ranges from Saturday to Sunday and all.
- Pre-record: System can pre-record the video before the event occurs into the file. The value ranges from 1 to 30 seconds depending on the bit stream.
- Redundancy: System supports redundancy backup function. You can highlight Redundancy button to activate this function. Please note, before enable this function, please set at least one HDD as redundant. (Main menu->Advanced->HDD Management). **Please note this function is null if there is only one HDD and the 64-channel series product max supports redundancy records from 4 channels.**
- Snapshot: You can enable this function to snapshot image when alarm occurs.
- Record types: There are four types: regular, motion detection (MD), Alarm, MD & alarm.
- Holiday setting: Click it you can see an interface shown as in Figure 2-15. Here you can set holiday date. Check the box, it means current channel shall record as your holiday setup. Please go to the Period interface to set the holiday date record setup.

Please highlight icon  to select the corresponding function. After completing all the setups please click save button, system goes back to the previous menu.

At the bottom of the menu, there are color bars for your reference. Green color stands for regular recording, yellow color stands for motion detection and red color stands for alarm recording. The white means the MD and alarm record is valid. Once you have set to record when the MD and alarm occurs, system will not record neither motion detect occurs nor the alarm occurs.

The SCHEDULE window displays settings for recording periods. At the top, it shows 'Channel 1', 'PreRecord 4 sec.', and checkboxes for 'Redundancy' and 'Snapshot'. Below this is a 'Holidays Setting' checkbox. The main section is a table with columns for 'Period', 'Record Type', 'Regular', 'MD', 'Alarm', and 'MD&Alarm'. There are six rows for Period 1 through Period 6. Each row has time input fields (e.g., '00 :00' to '-24 :00') and checkboxes for the record types. A legend at the bottom indicates: Regular (green), MD (yellow), Alarm (red), and MD&Alarm (blue). Below the legend is a timeline from 0 to 24 hours. At the bottom are buttons for 'Default', 'Copy', 'OK', and 'Cancel'.

Period	Record Type	Regular	MD	Alarm	MD&Alarm
Period 1	00 :00 -24 :00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 2	00 :00 -24 :00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 3	00 :00 -24 :00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 4	01 :00 -24 :00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 5	00 :00 -24 :00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 6	00 :00 -24 :00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Figure 2-14

The date selection window shows a calendar for June 2012. The title bar displays '2012-06-18'. The calendar grid shows days from Sunday to Saturday. The 18th of June is highlighted in green. Navigation buttons for previous and next months are on the left and right. At the bottom are 'OK' and 'Cancel' buttons.

Figure 2-15

2.5.1 Quick Setup

This function allows you to copy one channel setup to another. After setting in channel 1, you can click paste button and turn to channel 2 and then click copy button. You can finish setting for one channel and then click save button or you can finish all setup and then click save button to memorize all the settings.

2.5.2 Redundancy

Redundancy function allows you to memorize record file in several disks. When there is file damage occurred in one disk, there is a spare one in the other disk. You can use this function to maintain data reliability and safety.

In the main menu, from Setting to Schedule, you can highlight redundancy button to enable this function. See Figure 2-16.

In the main menu, from Advanced to HDD management, you can set one or more disk(s) as redundant. You can select from the dropdown list. See Figure 2-16. System auto overwrites old files once hard disk is full.

Please note only read/write disk or read-only disk can backup file and support file search function, so you need to set at least one read-write disk otherwise you can not record video.

Note

About redundancy setup:

- If current channel is not recording, current setup gets activated when the channel begin recording the next time.
- If current channel is recording now, current setup will get activated right away, the current file will be packet and form a file, then system begins recording as you have just set.

After all the setups please click save button, system goes back to the previous menu.

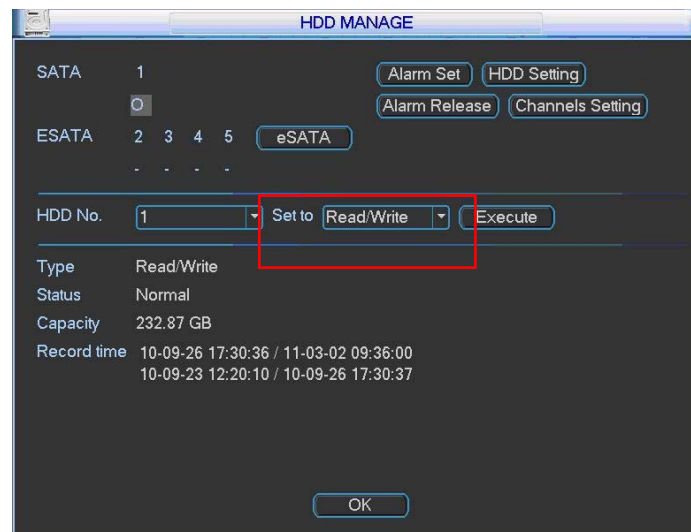


Figure 2-16

Playback or search in the redundant disk.

There are two ways for you to playback or search in the redundant disk.

- Set redundant disk(s) as read-only disk or read-write disk (Main menu->Advanced->HDD management). See Figure 2-16. System needs to reboot to get setup activated. Now you can search or playback file in redundant disk.
- Dismantle the disk and play it in another PC.

2.6 Snapshot

Please note the 24/32-channel series product supports 24/32-channel snapshot function. The 64-channel series product supports 1-16-channel snapshot function only.

2.6.1 Schedule Snapshot

In Encode interface, click snapshot button to input snapshot mode, size, quality and frequency. See the interface on the left of Figure 2-17.

In FTP (Main Menu->Network->Network Setting) interface, please input upload interval. See the interface in the middle of Figure 2-17.

In Schedule interface, please enable snapshot function. See interface on the right of Figure 2-17.

Please refer to the following figure for detailed information. See Figure 2-17.

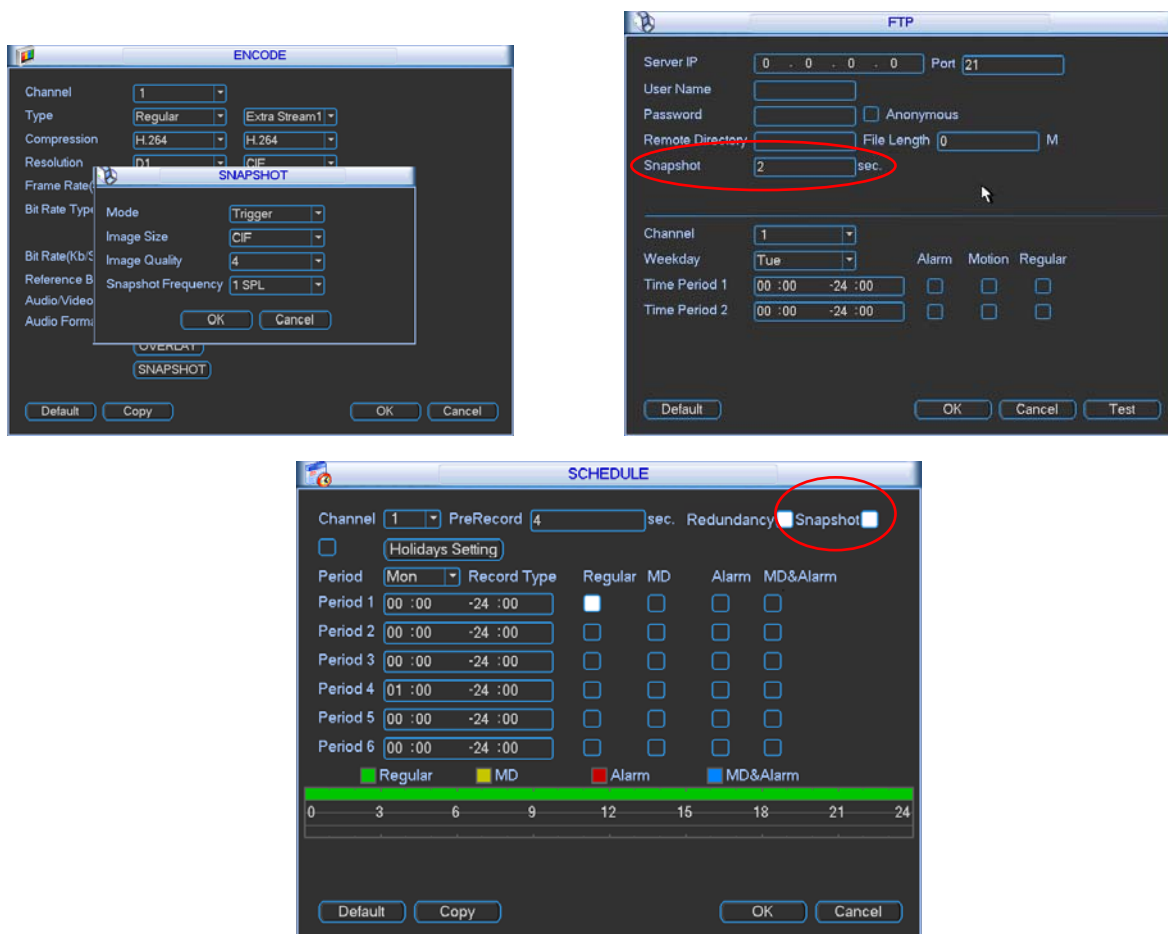


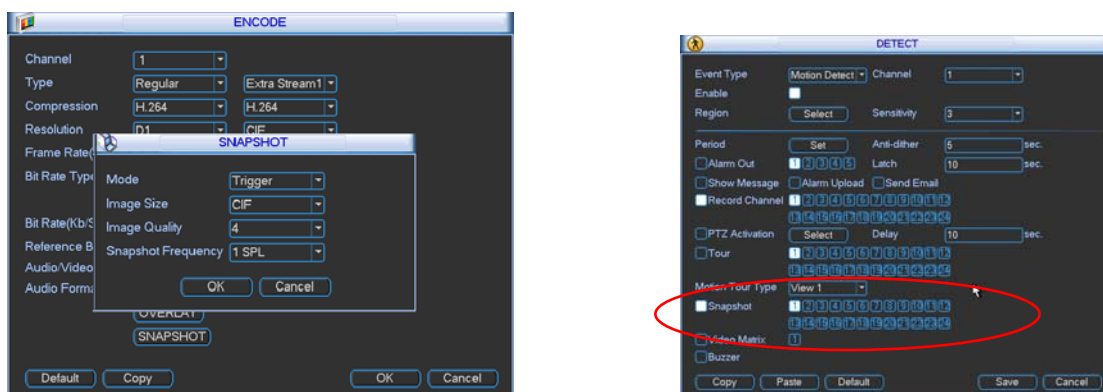
Figure 2-17

2.6.2 Activation Snapshot

Please follow the steps listed below to enable the activation snapshot function. After you enabled this function, system can snapshot when the corresponding alarm occurred.

- In Encode interface, click snapshot button to input snapshot mode, size, quality and frequency. See the interface on the left of Figure 2-18.
- In FTP interface please input upload interval. See the interface in the middle of Figure 2-17.
- In Detect interface please enable snapshot function for specified channels (interface in the middle of Figure 2-18). Or in alarm interface (interface on the right of Figure 2-18) please enable snapshot function for specified channels.

Please refer to the following figure for detailed information. See Figure 2-18.



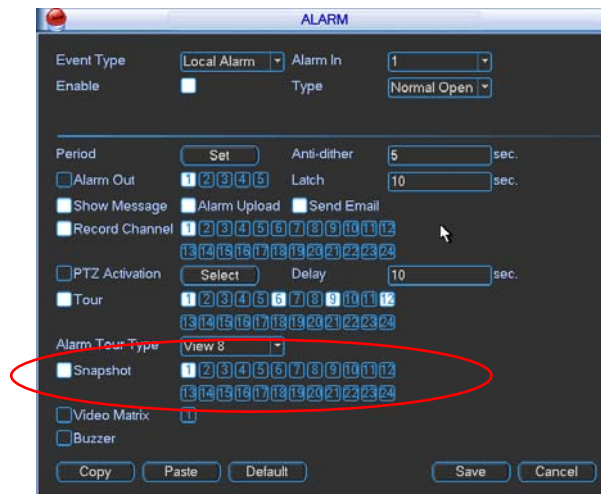


Figure 2-18

2.6.3 Priority

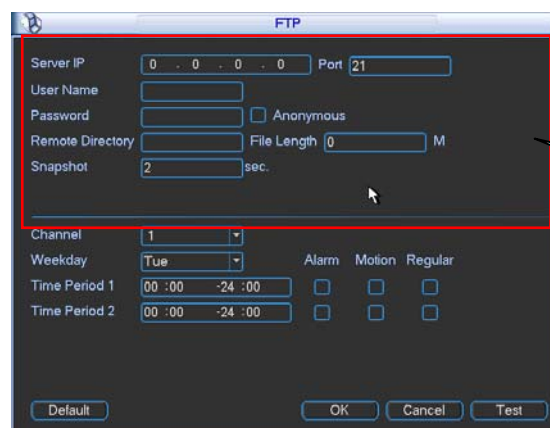
Please note the activation snapshot has the higher priority than schedule snapshot. If you have enabled these two types at the same time, system can activate the activation snapshot when alarm occurs, and otherwise system just operates the schedule snapshot.

2.6.4 Image FTP

In Network interface, you can set FTP server information. Please enable FTP function and then click save button. See Figure 2-19.

Please boot up corresponding FTP server.

Please enable schedule snapshot (Chapter 2.5) or activation snapshot (Chapter 2.6.2) first, now system can upload the image file to the FTP server.



Please input the corresponding information here, if you just upload the image FTP.

Figure 2-19

2.7 Network

Here is for you to input network information.

- IP Version: There are two options: IPv4 (Figure 2-20) and IPv6 (Figure 2-21). Right now, system supports these two IP address format and you can access via them.

- MAC address: The host in the LAN can get a unique MAC address. It is for you to access in the LAN. It is read-only.
- IP address: Here you can use up/down button (▲▼) or input the corresponding number to input IP address. Then you can set the corresponding subnet mask the default gateway.
- Subnet prefix: The input value ranges from 0 to 128. It is to mark a specified network MAC address. Usually it includes an organization of multiple-level.
- Default gateway: Here you can input the default gateway. **Please note system needs to check the validity of all IPv6 addresses. The IP address and the default gateway shall be in the same IP section. That is to say, the specified length of the subnet prefix shall have the same string.**
- DHCP: It is to auto search IP. When enable DHCP function, you can not modify IP/Subnet mask /Gateway. These values are from DHCP function. If you have not enabled DHCP function, IP/Subnet mask/Gateway display as zero. You need to disable DHCP function to view current IP information. Besides, when PPPoE is operating, you can not modify IP/Subnet mask /Gateway.
- TCP port: Default value is 37777. You can change if necessary.
- UDP port: Default value is 37778. You can change if necessary.
- HTTP port: Default value is 80.
- RTSP port: Default value is 554.

Important: System needs to reboot after you changed and saved any setup of the above four ports. Please make sure the port values here do not conflict.

- Max connection: system support maximal 20 users. 0 means there is no connection limit.
- Preferred DNS server: DNS server IP address.
- Alternate DNS server: DNS server alternate address.
- Transfer mode: Here you can select the priority between fluency/video qualities.
- LAN download: System can process the downloaded data first if you enable this function. The download speed is 1.5X or 2.0X of the normal speed.

Important

For the IP address of IPv6 version, default gateway, preferred DNS and alternate DNS, the input value shall be 128-digit. It shall not be left in blank.

After completing all the setups please click save button, system goes back to the previous menu.

Figure 2-20 shows the Network Setting window for IPv4. The window is titled "NETWORK" and contains a "NETWORK SETTING" button. The settings are as follows:

Field	Value
IP Version	IPv4
IP Address	10 . 15 . 5 . 223
Subnet Mask	255 . 255 . 0 . 0
Gateway	10 . 15 . 0 . 1
TCP Port	37777
HTTP Port	80
UDP Port	37778
RTSP Port	554
Max Connection	20
Preferred DNS	8 . 8 . 8 . 8
Alternate DNS	8 . 8 . 4 . 4
DHCP	<input type="checkbox"/>
LAN Download	<input type="checkbox"/>

Buttons at the bottom: Default, Save, Cancel.

Figure 2-20

Figure 2-21 shows the Network Setting window for IPv6. The window is titled "NETWORK" and contains a "NETWORK SETTING" button. The settings are as follows:

Field	Value
IP Version	IPv6
MACAddress	fe80::5054:4cff:fed6:16ec/64
IP Address	2001:da8:207::9402 / 64
Gateway	2001:da8:207::9401
TCP Port	40003
HTTP Port	8086
UDP Port	37778
RTSP Port	554
Max Connection	20
Preferred DNS	::ffff:8.8.8.8
Alternate DNS	::ffff:8.8.4.4
Transfer Mode	<input type="checkbox"/> Latency
LAN Download	<input type="checkbox"/>

Buttons at the bottom: Default, Save, Cancel.

A red callout box points to the "64" in the IP Address field, labeled "Subnet Prefix".

Figure 2-21

2.7.1 Network Setting

Network setting interface is shown as in Figure 2-22. Please check the box to enable corresponding function and then double click current item to go to setup interface.

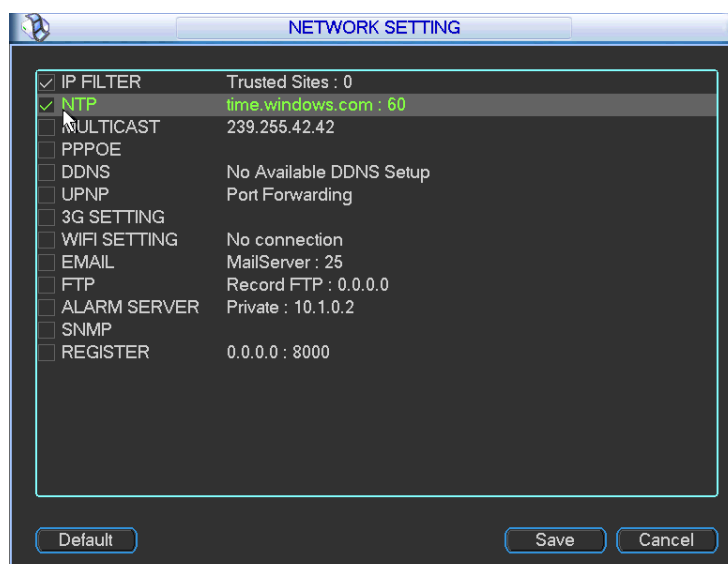


Figure 2-22

2.8 Pan/Tilt/Zoom

Please note:

- Slight difference may be found in the user's interface, due to various protocols.
- Please make sure the speed domes A/B cables are properly connected to the A/B ports of DVR.
- You have properly set PTZ information.
- Please switch camera monitor channel to current window.

2.8.1 PTZ Setup

The pan/tilt/zoom setup includes the following items. Please select channel first. See Figure 2-23.

- Protocol: Select corresponding PTZ protocol such as PELCOD.
- Address: Input corresponding PTZ address.
- Baud rate: Select baud rate.
- Data bit: Select data bit. Default value is 8.
- Stop bit: Select stop bit. Default value is 1.
- Parity: There are three choices: none/odd/even. Default value is none.

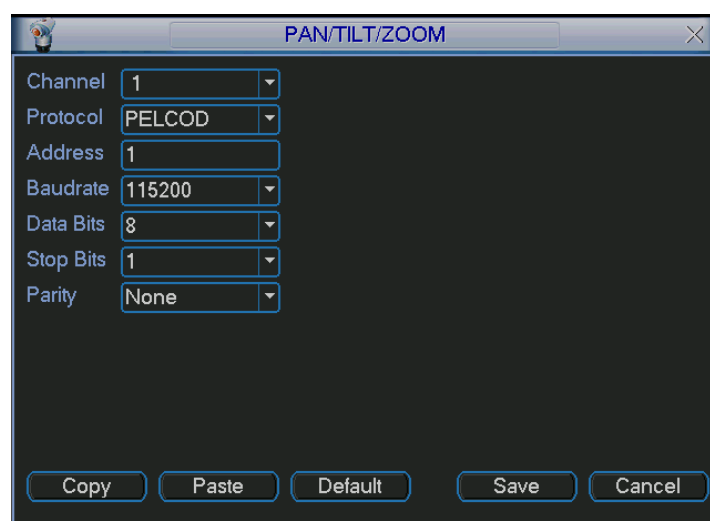


Figure 2-23

After completing all the setups please click save button, system goes back to the previous menu.

2.8.2 PTZ Operation

In one window display mode, right click mouse (click “Fn” Button in the front panel or click “Fn” key in the remote control). The interface is shown as in Figure 2-24.



Figure 2-24

Click Pan/Tilt/Zoom, the interface is shown as below. See Figure 2-25.

Here you can set the following items:

- Step: value ranges from 1 to 8.
- Zoom
- Focus
- Iris



Click icon  and  to adjust zoom, focus and iris.



Figure 2-25

In Figure 2-25, please click direction arrows (See Figure 2-26) to adjust PTZ position. There are total 8 direction arrows. Please note if you use remote control, you can use just four directions (Up/down/left/right).

The speed value ranges from 1 to 8.



Figure 2-26

2.8.3 3D Intelligent Positioning Key

In the middle of the eight direction arrows, there is a 3D intelligent positioning key. See Figure 2-27. Please note, this function needs protocol supported and can only be operated by mouse. Click this key, system goes back to the single screen mode. Drag the mouse in the screen to adjust section size. It can realize PTZ automatically.



Figure 2-27

Here is a sheet for you reference.

Name	Function key	function	Shortcut key	Function key	function	Shortcut Key
Zoom		Near	▶		Far	»
Focus		Near	◀		Far	►
Iris		close	◀		Open	►

You can click set button in Figure 2-25 (or click REC button in the front panel) to set preset, tour, and pattern.

You can click page switch button in Figure 2-25 (or click Fn button in the front panel) to call main function.

3 Web Client Operation

Slightly difference may be found in the interface due to different series.

3.1 Network Connection

Before web client operation, please check the following items:

- Network connection is right
- DVR and PC network setup is right. Please refer to network setup(main menu->setting->network)
- Use order ping `***.***.***.***(* DVR IP address)` to check connection is OK or not. Usually the return TTL value should be less than 255.
- System can automatically download latest web control and the new version can overwrite the previous one.
- If you want to un-install the web controls, please run `uninstall webrec2.0.bat` to auto delete the control or you can go to `C:\Program Files\webrec` to delete Single folder.
- Current series product supports various browsers such as Safari, firebox browser, Google browser. Device only support 1-channel monitor on the Apple PC.

3.2 Login

Open IE and input DVR address in the address column. For example, if your DVR IP is 10.10.3.16, then please input `http:// 10.10.3.16` in IE address column.

System pops up warning information to ask you whether install webrec.cab control or not. Please click yes button.

If you can't download the ActiveX file, please modify your IE security setup.

After installation, the interface is shown as below. See Figure 3-1.

Please input your user name and password.

Default factory name is admin and password is admin.

Note: For security reasons, please modify your password after you first login.

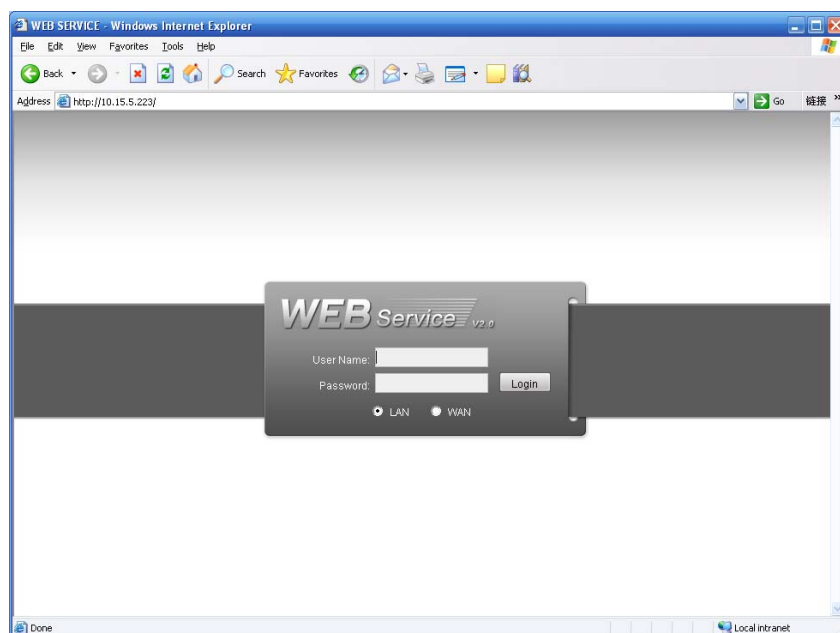


Figure 3-1

3.3 Main Window

3.3.1 LAN Login

For the LAN mode, after you logged in, you can see the main window. See Figure 3-2. Click the channel name on the left side; you can view the real-time video.

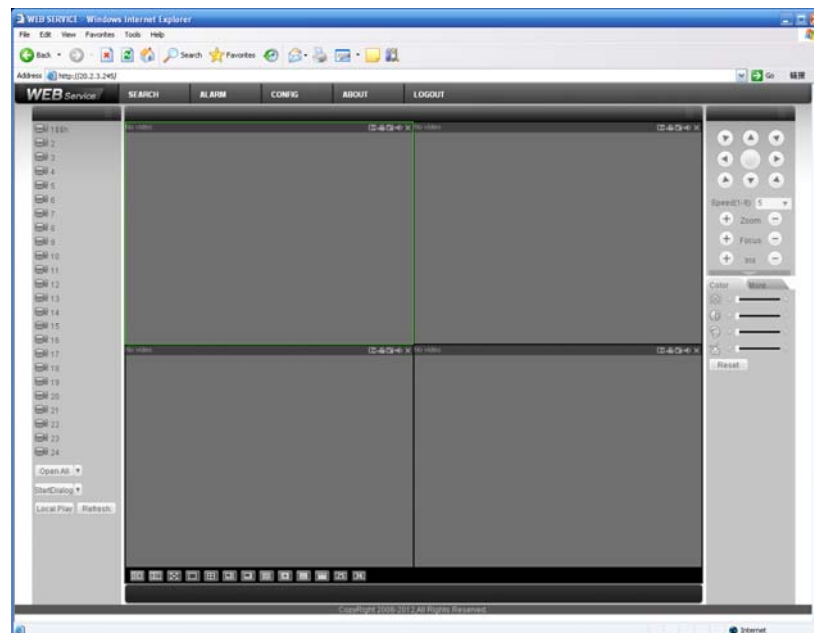


Figure 3-2

3.3.2 WAN Login

In WAN mode, after you logged in, the interface is shown as below. See Figure 3-3.

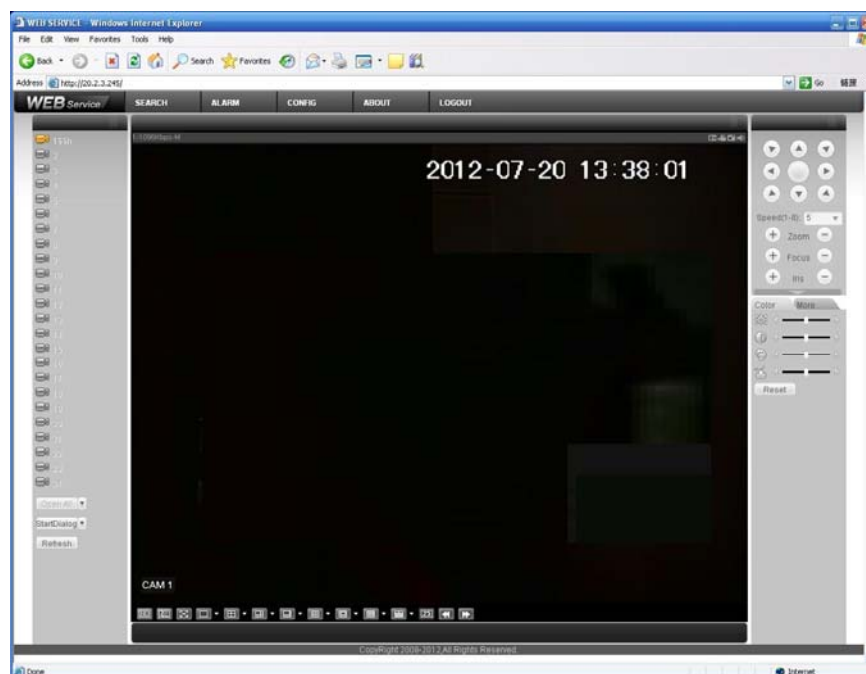


Figure 3-3

For detailed operation information, please refer to the *User's Manual* included in the resources CD.

Appendix Toxic or Hazardous Materials or Elements

Component Name	Toxic or Hazardous Materials or Elements					
	Pb	Hg	Cd	Cr VI	PBB	PBDE
Sheet Metal(Case)	○	○	○	○	○	○
Plastic Parts (Panel)	○	○	○	○	○	○
Circuit Board	○	○	○	○	○	○
Fastener	○	○	○	○	○	○
Wire and Cable/AC Adapter	○	○	○	○	○	○
Packing Material	○	○	○	○	○	○
Accessories	○	○	○	○	○	○

Note

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

Note

- For detailed operation introduction, please refer to our resource CD included in your package for electronic version of the *User's Manual*.
- Slight difference may be found in user interface.
- All the designs and software here are subject to change without prior written notice.
- All trademarks and registered trademarks mentioned are the properties of their respective owners.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website for more information.